

Thermostat

Control the temperature of your room.

Current room temperature

Indicated on screen when you look at it.


Modify temperature*

Press on the upward or downward arrows.



Modify ventilation

press on the middle button, then on the left or right arrows.

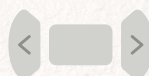

- Auto Mode (Far left)

Press to change to automatic mode.

- Ventilation Off (next option on the right)

Press to stop ventilation.

- Speed Option 1, 2 ou 3 (next option on the right)

Press on the middle button to confirm the desired speed

*Modified temperature

The temperature change will not be immediate, but rather gradual.